


AU-94TM Dual Zone Proximately Motion Sensor

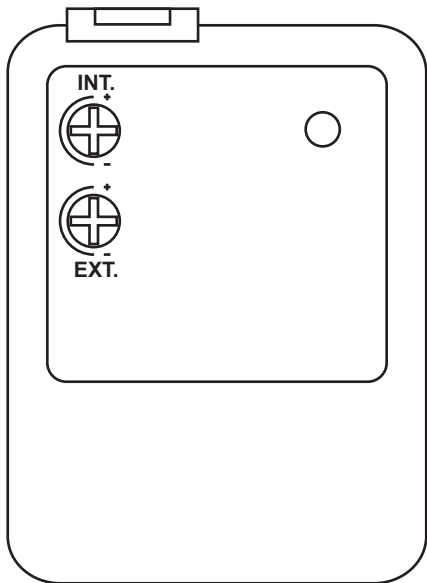

Omega Wiring Harness Coloring Convention
RED = Constant +12v **BLACK = Ground When Armed**
GREEN = Prewarn **BLUE = Alarm (Hard) Trigger**

© 2019 Omega Research & Development Technologies, Inc.

AU-94TM

Installation Instructions

Mounting The Module -

The AU-94TM module should be mounted in a location where it will not be subject to moisture or extreme conditions. It should also not be mounted where it will be blocked by any metal pieces of the vehicle for metal interrupts the radar field. The optimum location for the radar sensor is as close to the center of the vehicles's cabin space as possible.

Connection -

Connect one end of the included pre-wired 4-pin harness to the four pin connector on the AU-94TM. Connect the other end of the 4-pin harness to the sensor port on the alarm brain.

Adjustment -

The AU-94TM has an interior zone adjustment screw and an exterior zone adjustment screw. The interior zone will activate the hard trigger zone of the alarm and is indicated by the LED illuminating RED. The exterior zone will activate the prewarn circuit of the alarm and is indicated by the LED illuminating GREEN. To increase the sensitivity of either zone, turn the appropriate adjustment screw clockwise with a small screwdriver. To decrease sensitivity, turn the adjustment screw counter-clockwise.

CS-SENSOR-LINK (optional) -

This adaptor cable is required to connect this sensor to CrimeStopper SP-X02 alarm systems.
(NOT compatible with the SP-102)