

# Omegalink

## 5-BUTTON LED 2-WAY QUICK START OPERATION GUIDE

Visit [www.CarAlarm.com](http://www.CarAlarm.com) today

To Download the latest **operation guide** and learn more about system upgrades & other features!

### PROGRAMMING REMOTES TO THE SYSTEM

Remote programming is dependant on the system being controlled. Please consult your dealer or the system guide for the proper programming instructions.



Scan to register & download the latest operation guide at [CarAlarm.com!](http://CarAlarm.com)

[/omegard](https://www.facebook.com/omegard)

[/c/omegard](https://www.youtube.com/c/omegard)

**Problems? Questions? Contact Customer Service:**

800-554-4053 (toll free) | +1-770-942-9876 (outside USA)

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna., Increase the separation between the equipment and receiver., Connect the equipment into an outlet on a circuit different from that to which the receiver is connected., Consult the dealer or an experienced radio/TV technician for help.,

Warning! Changes or modifications made to this equipment not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

# Omegalink

## 5-BUTTON LED 2-WAY QUICK START OPERATION GUIDE



### REPLACING YOUR REMOTE BATTERY

STEPS	REMOTE PART#	BATTERY (QTY)
1) Find the part # on the back of the remote to identify the battery. 2) Locate the relief in case near the key chain and separate the case halves to access & replace the batteries.	552	CR2450 (1)
	551	CR2032 (1)

### SECURITY, KEYLESS ENTRY, & CONVENIENCE FUNCTIONS

FUNCTION	BUTTON(S)	REMOTE CONFIRMATION	NOTE
Lock & Arm*		Beep +  LED flash	The doors will lock.
Unlock & Disarm*		Beep +  LED flash	The doors will unlock.
Silent Lock*	x1	Single Beep	The doors will lock with no audible confirmation.
Silent Unlock*	x 2	Double Beep	Perform within 1 second. The doors will unlock with no audible confirmation.
Trunk/Hatch Release	for 3 sec.	Beep +  LED flash	Some systems may also unlock the doors.
Panic*	or  for 3 sec.	Alarm Alert + All LEDs Flash	The system will sound the horn/siren for Panic Mode.

**Register today at [www.CarAlarm.com](http://www.CarAlarm.com)**  
For warranty info & Download the latest operation guide.


# OmeGalink

## 5-BUTTON LED 2-WAY QUICK START OPERATION GUIDE

### REMOTE START FUNCTIONS

FUNCTION	BUTTON(S)	CONFIRMATION	NOTE
Engine Start/Stop	🔊 x 2	Melody + 🔊 LED flash	Upon successful start, the remote will beep 4x and the Start LED will flash every 5 seconds during the programmed runtime. Take Over*: Enter the vehicle and turn ignition key 'ON' then press the brake pedal.
Run Time Extender*	🔊	Beep + 🔊 LED flash	The runtime will reset (only allowed once per remote start cycle).
Auto Start Mode*	🔒 & 🔊	Beep + 🔒 & 🔊 LED flash	1 beep for Auto Start Mode On / 2 beeps for Auto Start Mode Off. Remote starts your vehicle every 2, 3, or 4 hours (programmable) or upon temperature threshold.

### WINDOW-MOUNT ANTENNA/RECEIVER

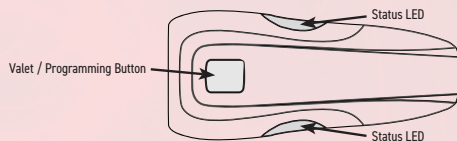

\*All functions are dependent upon vehicle & system availability. Consult your installer to confirm feature availability.

# OmeGalink

## 5-BUTTON LED 2-WAY QUICK START OPERATION GUIDE

### OTHER CONTROLLER FUNCTIONS

FUNCTION	BUTTON(S)	CONFIRMATION	NOTE
Remote Valet	Hold 🔒 & 🚗 for 3 sec	🔒 + 🚗 LED flash	This disables remote start and the security system. The status LED will turn on. Repeat this process or press valet button once to exit valet mode.
Multi-Car	Hold 🔒 & 🔊 for 3 sec	🔒 + 🔊 LED flash 1x = car 1 / 2x = car 2	The LED flash upon any button press will indicate current car setting. Repeat to return to car 1. 1 flash = car 1 / 2 flash = car 2
Button Lock	Hold 🔊 & 🚗 for 3 sec	🔊 & 🚗 LED will flash 4x	When button lock is on the remote will not transmit. When any button is pressed the corresponding LED will flash rapidly upon button press.
	📌 , 🚗	Beep + 🚗 LED flash 1x	AUX1 - Write function in "FUNCTION" column
	📌 x 2 , 🚗	Beep + 🚗 LED flash 2x	AUX2 - Write function in "FUNCTION" column
	📌 x 3 , 🚗	Beep + 🚗 LED flash 3x	AUX3 - Write function in "FUNCTION" column
	🔒 & 🚗	Beep + 🔒 & 🚗 LED flash	AUX4 - Write function in "FUNCTION" column

\*All functions are dependent upon vehicle & system availability. Consult your installer to confirm feature availability.