



4 Button / 1 Way Remote Start Systems

QUICK START OPERATION GUIDE

Visit www.CarAlarm.com today

To Download your **complete operation guide** and learn more about:

Additional Features

 
- Anti-Carjacking Mode
- Secure Code Override
- Turbo Timer Support & Operation
- Customizing System Options
- Passive Security Functions
- Emergency Override

System Upgrades

- Linkr Smartphone Control
- 2-Way Controllers w/ Extended Range
- Upgrading To Full Security With Sensors & Siren

Problems? Questions? Contact Customer Service:

800-554-4053 (toll free) | +1-770-942-9876 (outside USA)



Scan to register & download the full operation guide at CarAlarm.com!

This device complies with FCC Rules part 15. Operation is subject to the following two conditions: 1) This device may not cause harmful interference & 2) This device must accept any interference that may be received, including interference that may cause undesired operation.

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

Remote Start/Security System Model:

(Installer, write system model above)



4 Button / 1 Way Remote Start Systems

QUICK START OPERATION GUIDE

REPLACING YOUR REMOTE BATTERY

STEPS	REMOTE PART#	BATTERY (QTY)
1) Find the part # on the back of the remote to identify the battery.	1412 & 1418	CR2032 (1)
2) Remove the screw from the back of the remote		
3) Gently pry the case in halves apart to access & replace the battery.	1415 & 1417	CR2016 (2)





SECURITY, KEYLESS ENTRY, & CONVENIENCE FUNCTIONS

FUNCTION	BUTTON(S)	NOTE
Lock & Arm ¹		Security enabled systems will flash the status LED.
Lock Only ¹		Ideal for occupied vehicles, RV's, etc.
Unlock & Disarm ¹		If only driver's door unlocks, press again to unlock all
Silent Arm/Disarm ¹	x 2	System will toggle Arm/Disarm each time
Disable Sensor ¹		Sensors are disabled until you Lock/Arm again.
Trunk/Hatch Release	For 3 Sec.	By default, the system will also disarm/unlock
Panic ¹	or 3 Sec.	Doors will Lock or Unlock before panic.

¹-Security related functions only available on some models. Consult your installer for more info.

Register today at www.CarAlarm.com to activate/learn about your warranty & download a complete operation guide.

REMOTE START FUNCTIONS

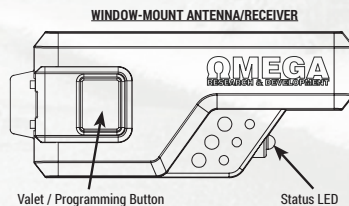
FUNCTION	BUTTON(S)	NOTE
Engine Start/Stop	 x 2	Activation is programmable (contact installer). <u>Take Over</u> : Turn ignition key 'ON' (not start), press brake pedal
Run Time Extender ²		The system will restart the internal run timer.
Low Battery & Low/Hi Temp Auto-Start		Auto-start will activate a max of once per 2 hours. See your installer or the full manual for threshold settings.
Remote Valet ²		This disables remote start and the security system. The status LED will turn on. Repeat this process or press valet button once to exit valet mode. <i>TIP: You can also enter valet mode by holding the valet button for 3 seconds!</i>
FUNCTION	VALET BUTTON	NOTE
Pit Stop Mode ²	Press 2x w/ Engine On For More Than 10 Sec. (6x for XL mode)	This will leave the engine running for the programmed run time (XL mode runs for 12 hours) so you can take your keys with you to run errands.

MANUAL TRANSMISSION RESERVATION MODE²





 

 

This must be performed before you can remote start a manual transmission vehicle to ensure the car is in neutral & maximum safety. Consult your installer for more information.

- 1) With the engine running (more than 10 seconds), hold the brake pedal & place the transmission in neutral.
- 2) Apply the parking brake and release the brake pedal.
- 3) Send the remote start command via your remote. The remote start should engage (not crank) and the status LED will begin flashing.
- 4) Take the ignition key out of the switch (the engine should stay running).
- 5) Exit the vehicle and lock your doors with the remote. The engine will turn off.

² These functions are only available on some remote start models. Consult your installer for more info.



AUXILIARY REMOTE FUNCTIONS³

FUNCTION	BUTTON(S)	NOTE
	 + 	CH3/AUX1 - Write function in first column
	 + 	CH4/AUX2 - Write function in first column
	 + 	CH5/AUX3 - Write function in first column
	 + 	AUX4 - Write function in first column

³ These special functions may not be available on your vehicle. Consult your installer.

PROGRAMMING REMOTES TO THE SYSTEM (UP TO 4)

BEFORE YOU BEGIN: Have all remotes for the system at hand.

- 1) Turn the ignition key "ON" (do not start).
- 2) Press the valet button 5 times within 5 seconds of step 1.
 - The horn may briefly sound
- 3) Press & release the "lock" button on each transmitter one after the other.
 - 1-button models, press the "start" button.
 - The siren/horn may chirp once for each transmitter.
 - NOTE: When the first remote is learned all previous remotes are erased.
 - NOTE: All other button functions will automatically be assigned.
- 4) Turn the ignition key "OFF".
 - NOTE: The system will exit at any time after 10 seconds of no activity.

SCAN TO WATCH
HOW-TO VIDEO



REMOTE START ERRORS⁴

CHIRPS/FLASHES	VIOLATED ZONE
LED ON	System in Valet mode
1	Hood opened
2	Brake pedal pressed
3	Bad tach signal or engine over-rev.
4	BLACK/WHITE wire lost ground
5	3D motion detected while cranking
6	Received engine stop command
7	Alarm was triggered
8	Run time expired
9	Low vehicle battery voltage detected

If the system fails to remote start or remote start stops unexpectedly, it will give a long horn/siren chirp followed by a series of short horn/siren chirps & light flashes. The short chirps/light flashes indicate the cause of the failure.

TIP: If remote start won't activate, the system may be in valet mode (Status LED ON). Press the valet button once to exit.

⁴ These functions are only available on some remote start models.